




SERVICE PARTS LIST

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		DATE Aug. 2016
M18 FUEL™ 3/4" SQUARE IMPACT WRENCH w/ friction ring		WIRING INSTRUCTION See Page 2
MODEL NO. M18CHIWF34-0	2762-20	

EXAMPLE:
 Component Parts (Small #) Are Included
 When Ordering The Assembly (Large #).

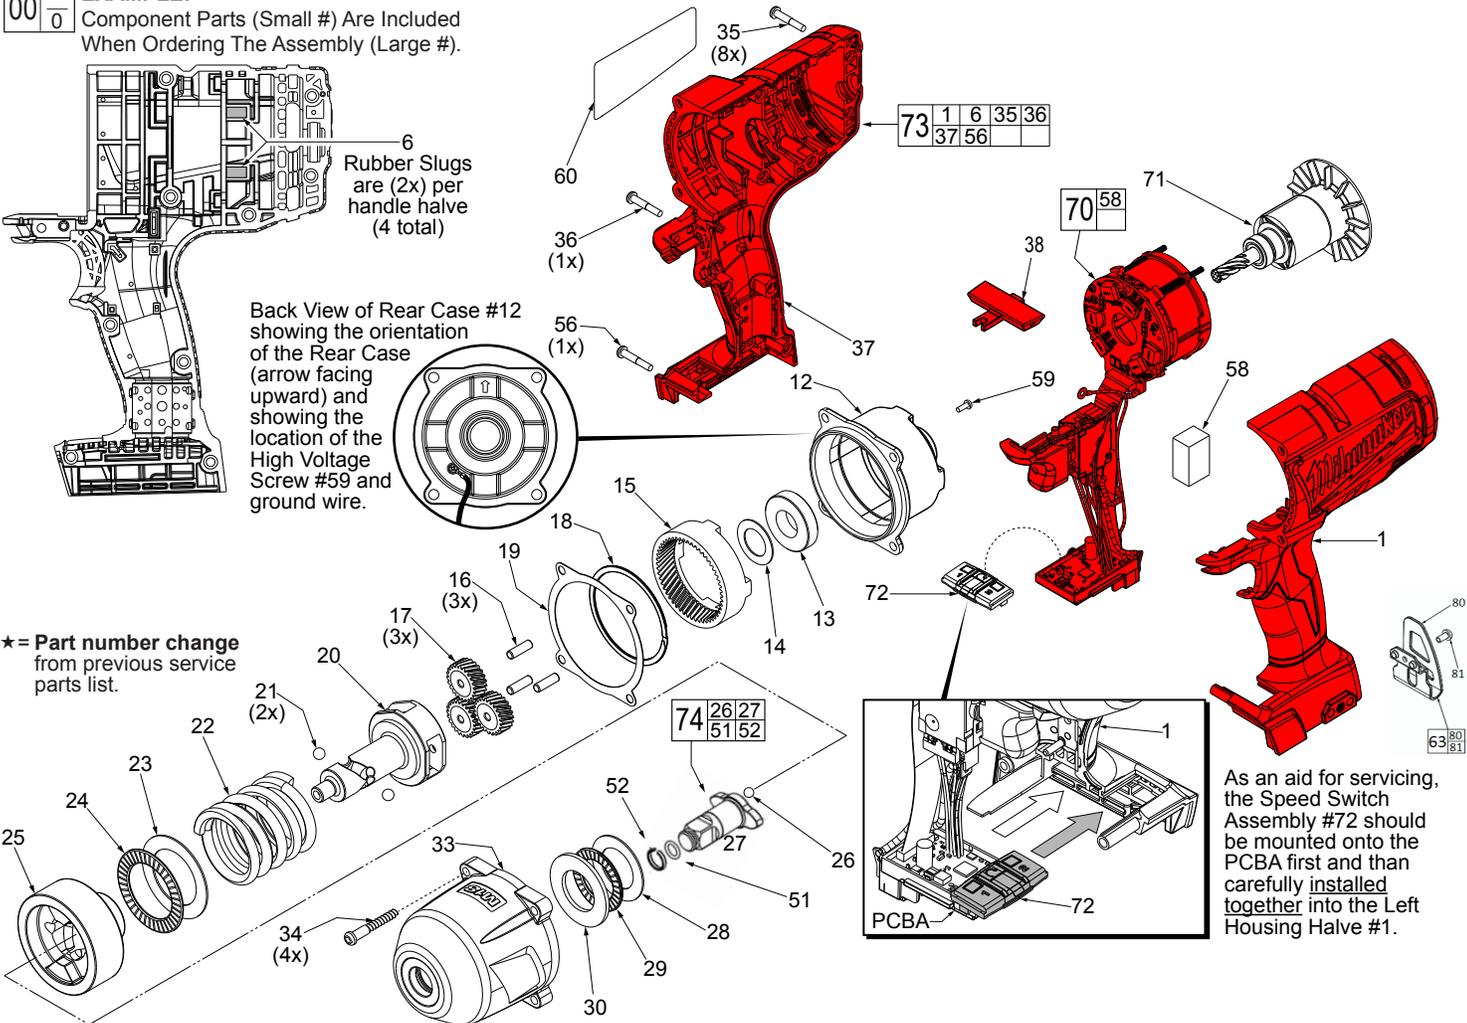

SCREW TORQUE SPECIFICATIONS				
FIG.	PART NO.	WHERE USED	SEAT TORQUE	
			(KG/CM)	(IN/LBS)
34	06-82-2210	Front Housing Assy.	36	31
35	06-82-0995	Housing Assembly	12.5	11
36	06-82-2230	Housing Assembly	8.5	7
56	06-82-2240	Housing Assembly	12.5	11
59	06-82-0165	High Voltage Screw	13	11

LUBRICATION NOTES:

A total of approx. 11 grams (.4 oz) will be used. Prior to reinstalling, clean gear assemblies with a clean, dry cloth. Lightly coat all parts highlighted here with grease. Apply a greater amount of grease to all internal and external gear teeth.

